


MSB/0412/12

Ballast Type: Electromagnetic Plastic Sign
 Starting Method: Rapid Start
 Lamp Connection: Series
 Input Voltage: 120V
 Input Frequency: 60Hz


Electromagnetic Plastic Sign Ballast Specifications

Lamp Type	# of Lamps	Lamp Footage	Volts	Rated Lamp Watts	Min. Start Temp (°F/°C)	Input Current (Amps)	Input Power (Watts)	Ballast Factor	THD %	Power Factor	B. E. F.	Wire Diag.
F24T12/HO	2	4	120	35	-20/-29	0.90	90	0.78	<55	0.84	0.87	2-1
F48T12/HO	1	4	120	60	-20/-29	0.82	80	0.77	<55	0.84	0.96	1-11
F48T12/HO	2	8	120	60	-20/-29	1.13	130	0.85	<20	0.97	0.65	2-1
F72T12/HO	1	6	120	85	-20/-29	0.92	100	0.81	<35	0.92	0.81	1-11
F72T12/HO	2	12	120	85	-20/-29	1.48	170	0.89	<15	0.98	0.52	2-1
F96T12/HO	1	8	120	110	-20/-29	1.03	120	0.84	<25	0.96	0.70	1-11

WIRING DIAGRAMS

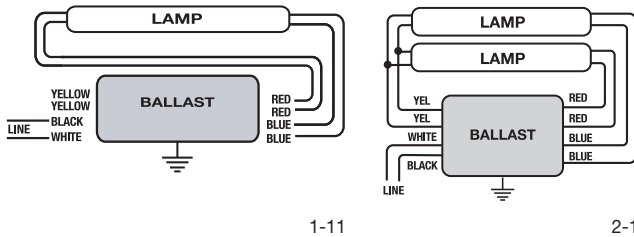

CASE DIAGRAM

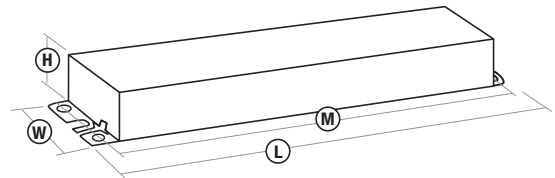

CASE DIMENSIONS

Overall (L)	Width (W)	Height (H)	Mounting (M)
11.75"	3.19"	2.60"	11.00"

STANDARD LEAD LENGTHS

	in.	cm.
Black	18	45.72
White	18	45.72
Blue	33	83.82
Red	33	83.82
Yellow	51	129.54

OCV: 480V

Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.

PN# 57102

Atlas Lighting Supply

2828 S. Linwood St. Visalia, CA 93277
 Phone: 559-697-6764 Fax: 888-605-2324
www.atlaslightingsupply.com

